

# MicroFlow

Non-contacting Microwave Liquid  
Velocity Sensor



# MicroFlow

## Non-contacting microwave liquid velocity sensor

### Features

- Non-contacting
- Cost-effective
- Lightweight, compact design
- Minimal installation costs
- No interruption to service
- Maintenance-free
- RS485 Modbus
- IP68

Pulsar's MicroFlow delivers accurate, repeatable velocity measurement for liquid flow, either as a stand-alone device or as part of a complete measurement system.


MicroFlow builds on Pulsar's award-winning pipe flow technology and world-leading open channel flow measurement systems.

MicroFlow can be installed as a stand-alone velocity sensor delivering data via RS485 Modbus or integrated within a complete system when combined with FlowCERT or Ultimate controller and dB series transducer.

Velocity x area calculation using MicroFlow provides a cost-effective flow measurement option compared to the installation of a primary measurement device such as a flume, and provides a viable alternative where the hydraulics of the site do not allow for a restriction in the channel.



EASY TO INSTALL  
MICROFLOW  
BRACKET

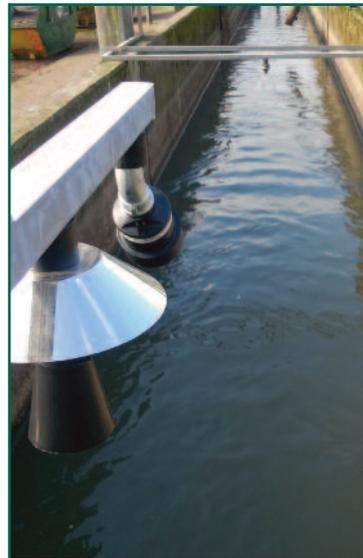

MICROFLOW AND dB LEVEL  
TRANSDUCER



VELOCITY MEASUREMENT IN  
WIDE CHANNELS



FIELD MOUNTING  
OF MICROFLOW  
AND LEVEL  
MEASUREMENT



BUILT-IN WEATHER SHIELD AS  
STANDARD





FLOW MEASUREMENT IN NARROW  
UNDERGROUND U-SHAPED  
CHANNEL

# A complete open channel flow measurement system

## Velocity x area measurement

With Pulsar FlowCERT Controller and dB level transducer


- For channels up to 1.5m wide
- Use with a single MicroFlow sensor

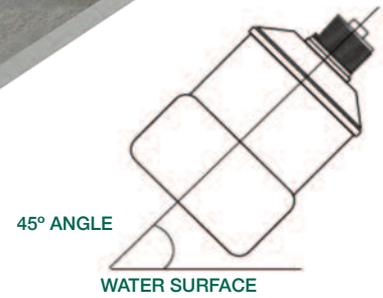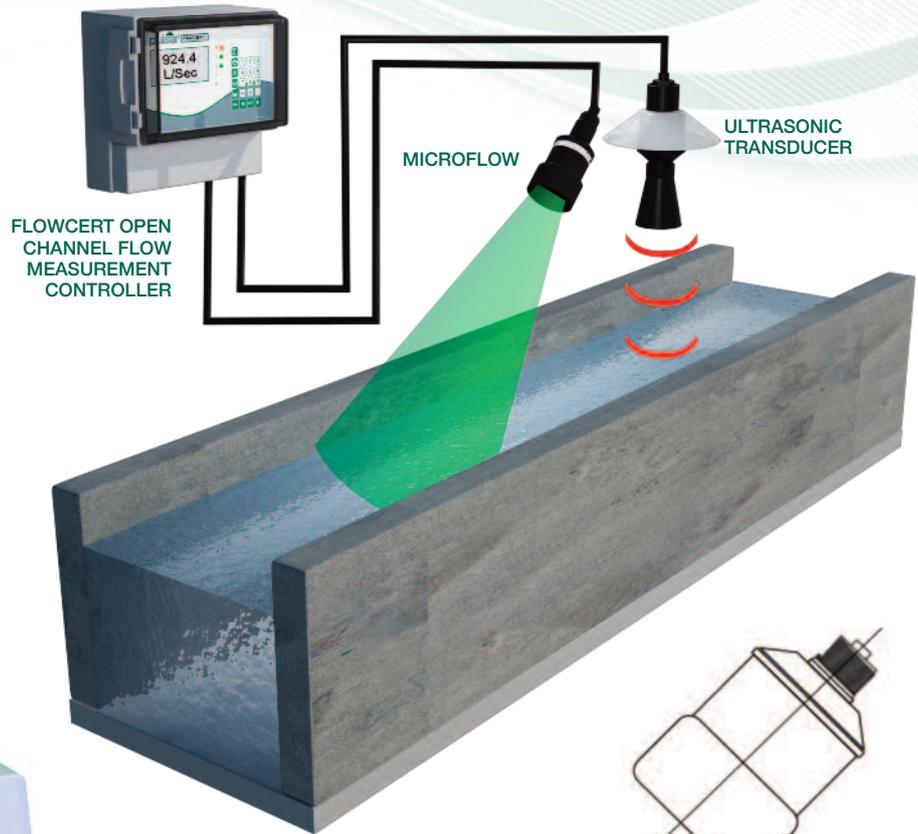

## Expandable Velocity x area measurement

With Pulsar Ultimate Controller and dB level transducer

- Multiple MicroFlow sensors for wider channels
- Pulsar Speedy velocity sensor (submerged, doppler) can be included to add underwater velocity measurement

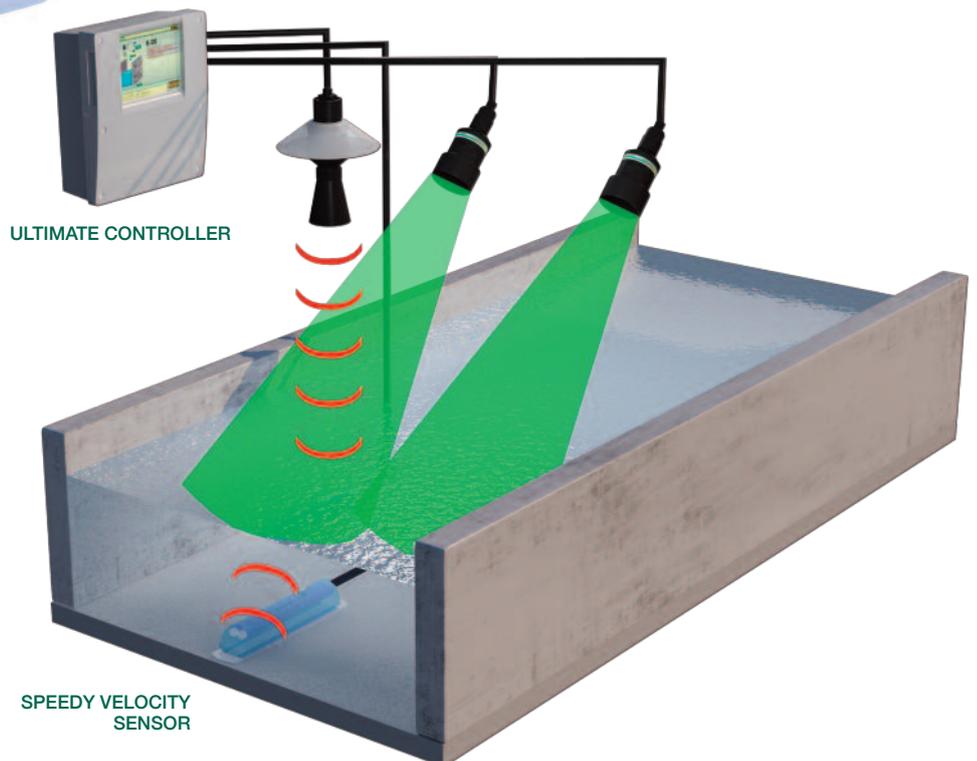

# Technical Specification

## PHYSICAL

Sensor body material:	Valox 357
Mounting connection:	Mounting bracket with 45° bend (optional)
Sensor body dimensions:	Diameter 86mm x Height 156mm
Sensor weight:	Nominal 1kg
Transducer cable extensions:	Maximum 100m

## ENVIRONMENTAL

Enclosure protection:	IP68
Maximum and minimum temperature:	-20°C to +60°C (-4°F to +140°F)
Flammable atmosphere approval (pending):	II 2 G D Ex mb IIC T4 Gb Ex mb IIC T135 Db

## APPROVALS

CE approval:	Complies with BS EN61326-1:2013 for emissions and immunity
RADAR approvals:	EN 300-440-1 EN 300-440-2 FCC 15.245

## PERFORMANCE

Operating voltage:	10-28Vdc
Velocity range:	0.2 - 6.0m/s
Accuracy:	The greater of ±0.5% or 0.03m/s
Optimum installation:	45° optimum and mounted in the centre line of the channel with clear uninterrupted view of the liquid surface.
Level measurement: RADAR: Transmitter power:	Compatible with up to dB6 transducer K Band (ISM) <15dBm
Beam width:	20° inclusive

## OUTPUTS

Communication:	RS485 and Modbus RTU
Compatibility with Pulsar controllers:	Integrates with FlowCERT or Ultimate

## PROGRAMMING

PC Programming:	Via RS485 Modbus
Programming security:	Via passcode
Programming data integrity:	Via non-volatile memory
PC setup and monitoring software:	MicroFlow PC

## SUPPLY

Power consumption:	0.5W maximum
--------------------	--------------

## Pulsar® Process Measurement Ltd.

Cardinal Building  
Enigma Commercial Centre  
Sandy's Road  
Malvern  
Worcestershire  
WR14 1JJ  
England

Tel: +44 (0) 1684 891 371  
Fax: +44 (0) 1684 575 985  
Email: info@pulsar-pm.com

## Pulsar® Process Measurement Inc.

P.O. Box 5177  
4565 Commercial Drive  
Suite 105  
Niceville  
FL 32578  
USA

Tel: +1 850 279 4882  
Fax: +1 850 279 4886  
Email: info.usa@pulsar-pm.com

[www.pulsar-pm.com](http://www.pulsar-pm.com)

## UK AWARDS/CERTIFICATIONS



Patents apply to this product

Pulsar® is a registered trademark of Pulsar Process Measurement Ltd. in the UK, USA and China.

Pulsar Process Measurement Limited operates a policy of constant development and improvement and reserves the right to amend technical details as necessary

Literature number: MicroFlow/MHA/3-16 R2 10-16